

INSTALLATION INSTRUCTION

LED SOLAR FLOODLIGHT



Time
switch



Intelligent
light control



Wireless
remote control

2 YEAR
WARRANTY

INTRODUCTION & WARRANTY


Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installing and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best.

The warranty is valid for 2 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. This product is warranted for manufacturing defects only


Specifications

Model Number	Solar-Panel Watts	Lumen	Beam Angle	IP Rating	Battery Capacity	Charging Time	Working Time
VT-25	25W	550	120	IP65		4 Hours	8 Hours
VT-40	40W	1050	120	IP65		4 Hours	8 Hours
VT-60	60W	1650	120	IP65		4 Hours	8 Hours
VT-100	100W	2450	120	IP65		4 Hours	8 Hours
VT-200	200W	3100	120	IP65		4 Hours	8 Hours
VT-300	300W	4200	120	IP65		4 Hours	8 Hours

Parts Included

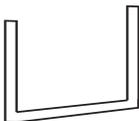
<p>1</p>  <p>Solar panel</p>	<p>2</p>  <p>Solar light</p>
<p>3</p>  <p>Remote control</p>	<p>4</p>  <p>expansion screw</p>
<p>5</p>  <p>U-frame</p>	<p>6</p>  <p>5m wire</p>

Remote Control

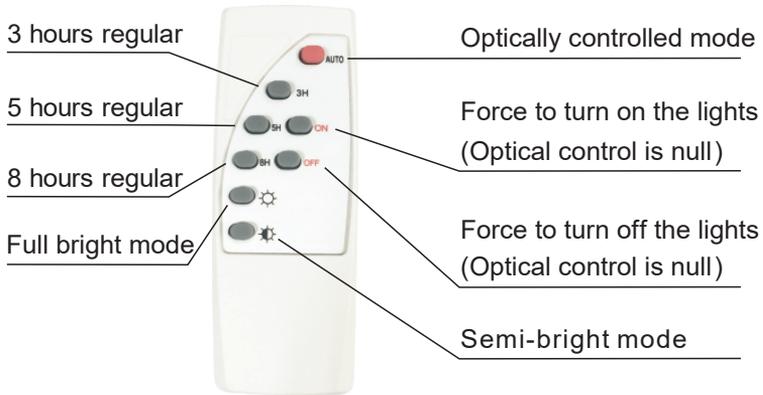

Installation

Use 2 expansion screws to fix the solar panels on the wall

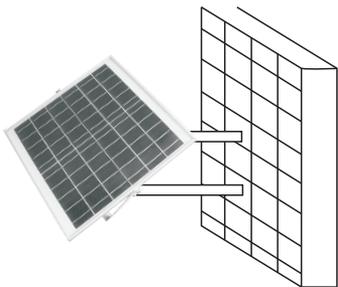

Use 2 expansion screws to fix the solar lamp on the wall



Plug the twist after the twist cap

Installation Guide

1. Before installing please remove all the parts to check if all are in good condition or not.
2. The floodlight is connected to the solar panel against the sun light. Please makes sure the solar panel is adjusted in correct angle inorder to receive sunlight.
3. The remote control is designed with a operation distance of 8-15m
4. A. The lamp comes with two inflated studs as shown in the parts included section.
B. The solar panel Angle must be adjusted in correct direction to receive sunlight.
C. Lamps can not be installed in low-lying areas ,so as not to soak;
5. Plug the male and female plugs and tighten the waterproof cap and install it.
6. After installation test the light using the remote control.

Maintaineance & Warning

- Do not use solvents, petrol, etc. Otherwise the light will be damaged.
- Clean the light with a dry, lint-free cloth.
- Check the solar panel for dirt regularly. If dirt or is present remove it to guarantee flawless function of the product.
- Especially during the winter, keep the product free from snow and ice.
- Confirm installation direction is correct (solar panel should be at top)
- Confirm no objects blocking the solar panel to receive sunlight
- Keep away from the fire.
- Don't immerse in the water

Disposal:

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, do not throw in the garbage. Information on collection sites and their opening hours is available from your local authority. Contact your local waste management authority for additional information on how to dispose of the used product.